

READ AND SAVE THE INSTRUCTION

Compatible for Universal Truck Ladder Rack (with sidebar)


Please read and understand all instructions before starting this installation.

The manufacturer holds no responsibility for any personal injury or damage sustained to vehicle during installation or use of this product.

I Parts List:


A1		A2		A3		A4	
Main Brackets L/R	4	Bracket (Down)	4	Bracket (Up)	4	Crossbar	4
A5		A6		A7		A8	
Vertical Beam	4	Clamping A (With rail mounting)	4	Clamping B (Railless mounting)	4	Top Cover	4
A9		A		B		C	
EVA Foam Sponge	4	M8X65 Hex Head Bolt	32	M8 Spring Washer	32	Φ8*20*1.5 Flat Washer	64
D		E		F		G	
M8 Hex Head Nut	32	M8X35 Hex Head Bolt	8	M8 Spring Washer	8	Φ8*20*1.5 Flat Washer	8

Front Of The Car

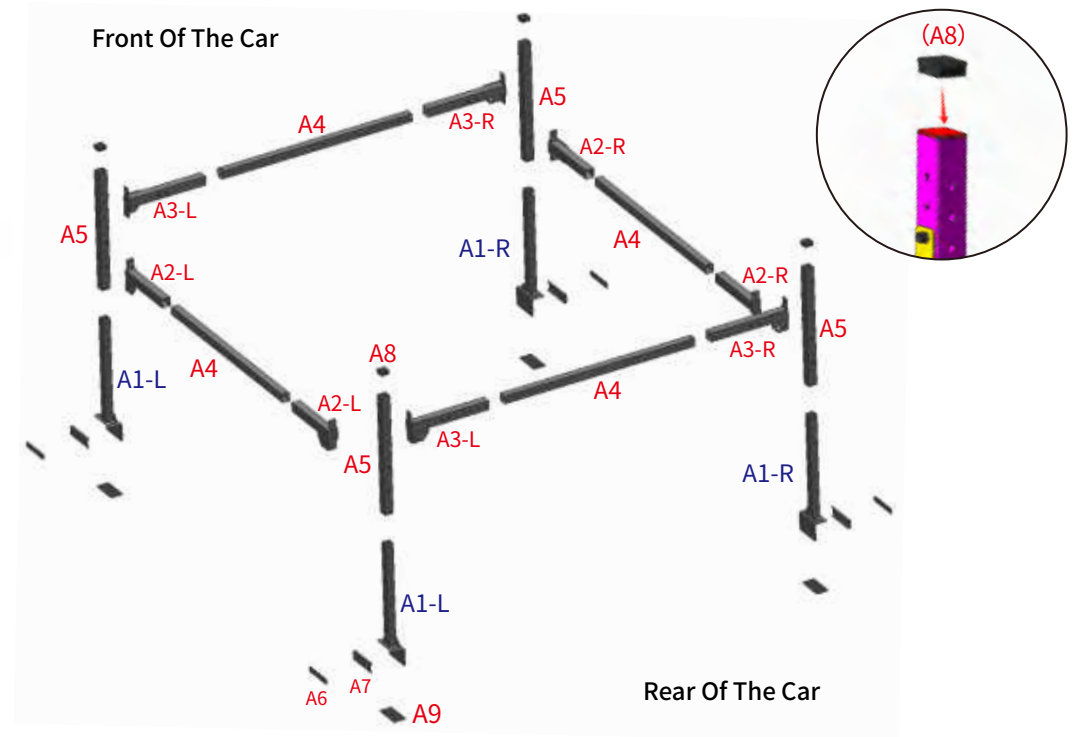

Rear Of The Car


II Installation Steps:

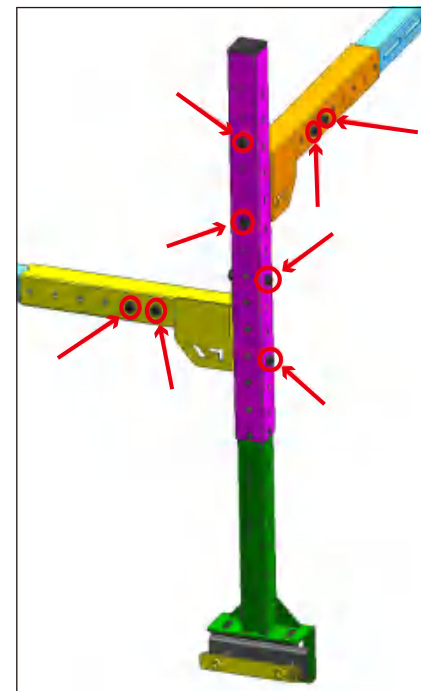




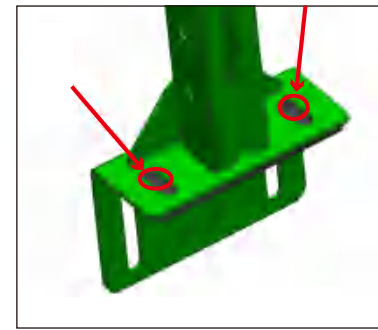
HARDWARE LIST			
NO.	NAME	QTY	
A	M8*65 Hex Head Bolt	32	
B	Φ8 Spring Washer	32	
C	Φ8 Flat Washer	64	
D	M8 Hex Nuts	32	

STEP 1

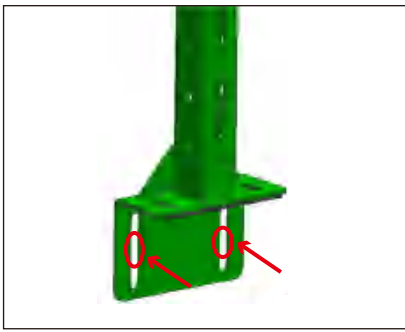All mounting holes on one side are marked and each hole requires a set of M8X65 hex head bolts, M8 spring washers, M8 flat washers and M8 hex nuts to make up the product. The mounting procedure for the other side is the same. (To adjust the width easily, do not tighten all bolts first.)



HARDWARE LIST			
NO.	NAME	QTY	
E	M8*35 Hex Head Bolt	8	
F	Φ8 Spring Washer	8	
G	Φ8 Flat Washer	8	



Installation Method Three:

Reserve mounting locations for self-drilling holes.



STEP 2

Attach each of the holes circled by the product in the diagram to the car with a set of M8X35 head hex bolts, M8 spring washers, and M8 flat washers as shown in the diagram. Same procedure for the other side.

There are three ways to install this product, the first is with rail mounting, the second is without rail mounting as well as the third is self drilling mounting, depending on which of the above mounting methods your car meets to be installed.


NOTE: Use the supplied sponge sticker (Part A9) to attach to Part A1.

III Installation Effect :




NOTICE

1. All the pictures in the manual are for reference only. The pictures may be different from the real object but the installation is the same.
2. Please regularly check whether all accessories connected with the car are loose to ensure safe use.

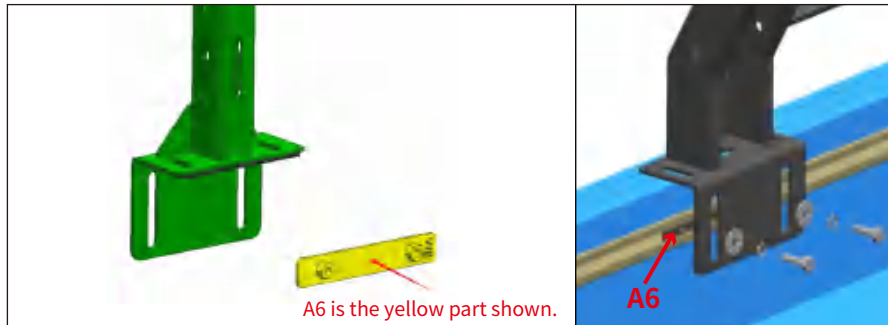

Installation Method One:

Secure the bed frame to the truck bed rails with parts A6, E, F and G as shown.

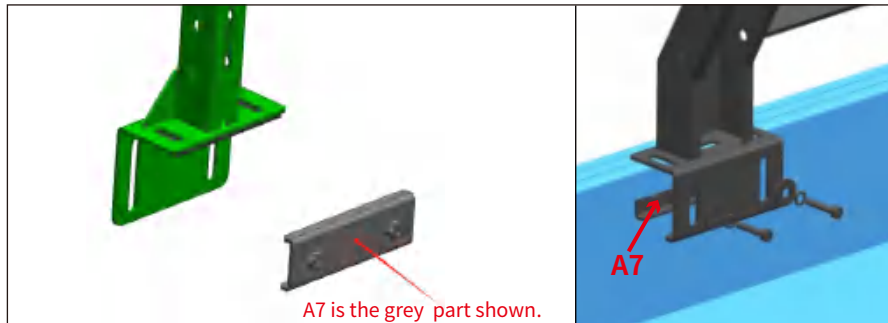

Installation Method Two:

Secure the bed frame to the truck bed with parts A7, E, F and G as shown.