


00 STEP5 Tools Required

10mm, 13mm Socket

5mm Hex Bit

Ratchet

Torque Wrench

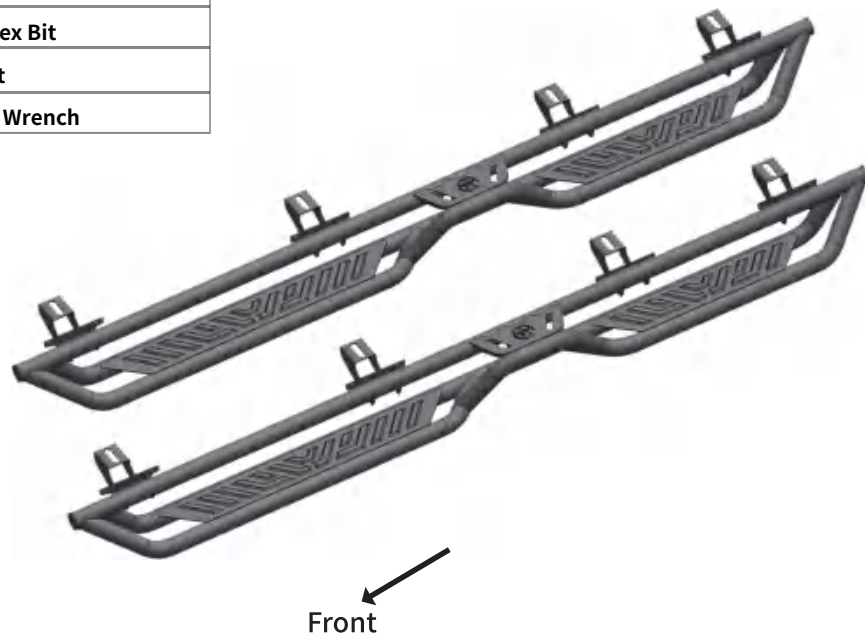

Running-0071

00 PRE-INSTALLATION INSTRUCTIONS

Read this instruction carefully before starting installation.

Proper tools will improve the quality of installation and reduce the required.

If missing parts or any damage found, please take a picture and co

Professional installation would be highly recommended.

Periodic check to ensure all mounting hardware remains secure a

CARE AND USE INSTRUCTIONS

01 STEP1

pre-installation

Remove the factory rock rails if equipped.

1. Remove (4) M8 hex bolts and (8) M6 hex nuts on inner rocker panel.

2. Remove the factory rocker rail from inner rocker panel.

Note: The step bar and factory rock rail cannot coexist.

3. Locate (4) mounting positions each side.

4. Clean the dirt and sealant around mounting positions.




Driver Left Side

02 STEP2

Connection of mounting accessories

Align and install the bracket with the pedal mounting bracket holes using (16)M8X25 rounded head Allen bolt, (16) M8 spring washer, (32)M8 flat washer, and (16) M8 flange nut.

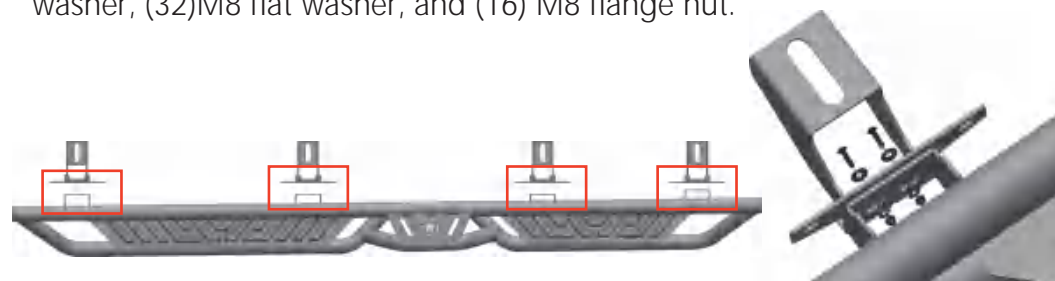

03 STEP3

Connection of mounting accessories

1.Connect the installed pedal body to the car's rocker arm using(16) M6X25 **round head hexagon bolts**, (16) M6 spring washer, (16) M6 flat washer, and (16) M6 flange nut.
Do not tighten all the screws completely yet.



Driver Left Side




04 STEP4


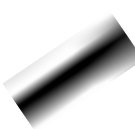






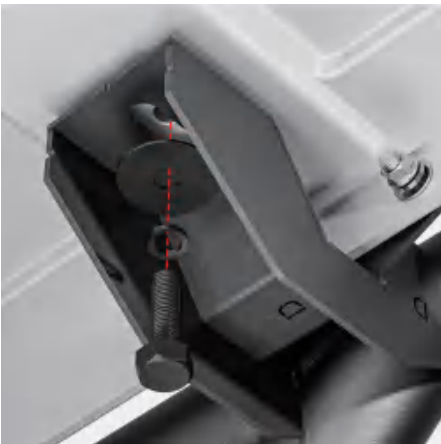

Mounting with car

1.Secure the step bar onto body frame panel using (8) M8 hex bolts, (8) M8 flat washers, (8) M8 spring washers.

Now adjust the pedal body to be level and tighten all the screws.



Loading components

1		2		3		4	
							
Pedal bracket	8	M8X30 Hexagon Bolt	8	M8X25 rounded head Allen bolt	16	M6X25 round head hexagon bolts	16
5		6		7		8	
							
M8 spring washers	24	M6 spring washers	16	M8X30 Flat Washer	40	M6 Flat Washer	16
9		10					
							
M6 Hexagon Nut	16	M8 Hexagon Nut	16				