


### Running-5001

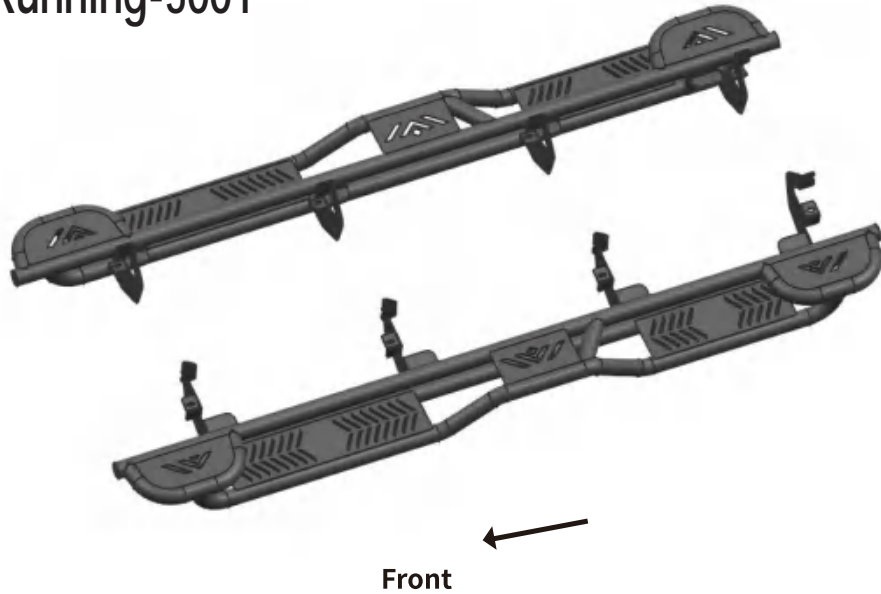

## 00 PRE-INSTALLATION INSTRUCTIONS

Read this instruction carefully before starting installation.  
Proper tools will improve the quality of installation and reduce the time required.  
If missing parts or any damage found, please take a picture and contact us.  
**Professional installation would be highly recommended.**

## 01 STEP1 pre-installation

1. Locate (4) mounting positions each side.
2. Remove factory plugs from mounting positions.
3. Clean the sealant and dirt around mounting positions.



Front

Center


Center

Rear


## 02 STEP2

### Pedal and car mounting

1. Attach bracket to the rocker panel and secure with (2) M8 hex bolts, (2) M8 flat washers, (2) M8 lock washers.
2. Repeat to install all brackets. Do not fully tighten.

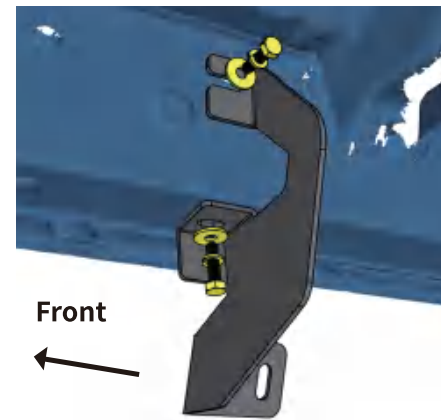

Front/Center Passenger Side Bracket

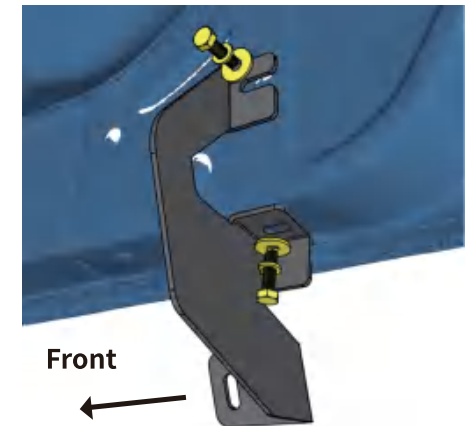

Rear Passenger Side Bracket



Front

Passenger Right Side




**Note:**

The rear bracket is in the opposite direction to the front and center brackets.







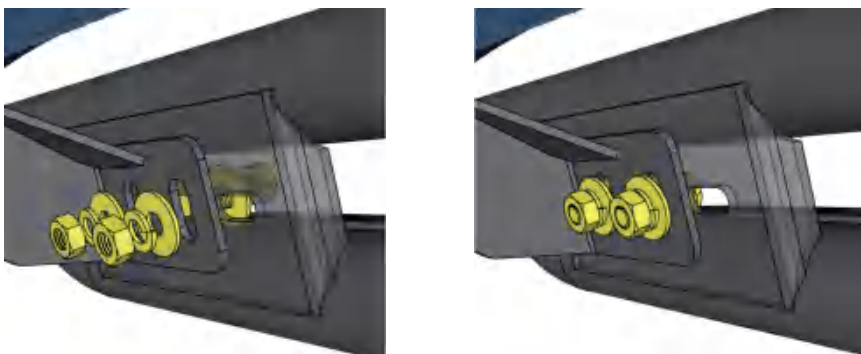


## 03 STEP3

## coupling with pedal

1. With assistance, lift and attach the step bar to brackets. Secure the step bar on brackets using (8) M10 hex bolts, (16) M10 flat washers, (8) M10 lock washers, (8) M10 hex nuts.
2. Repeat to install the other side step bar.



## Loading components

			
Front & Center Driver Side Rear Passenger Side Bracket	×4	Front & Center Passenger Side Rear Driver Side Bracket	×4
			
M10×30 Hexagon Bolt	×16	M8×30 Hexagon Bolt	×16
			
M10×25 Flat Washer	×32	M8×24 Flat Washer	×16
			
M10 Lock Washer	×16	M8 Lock Washer	×16
			
M10 Hexagon Nut	×16		

## 05 STEP5 Tools Required

13mm, 16mm Socket .  
16mm Wrench  
Ratchet  
Torque Wrench

## 04 STEP4

## Integral &amp; Vehicle Mounting

1. Tighten M8 hex bolts on vehicle with 15 ft. lbs. torque.
2. Adjust the step bar to level and tighten M10 hex bolts and nuts with 31 ft. lbs. torque.
3. After the step bar installed, periodic check to ensure all mounting hardware remains secure and tight.



Front



Passenger Right Side

[3]

[4]